



PANASONIC I.P CAMERAS – USER GUIDE HCM RANGE QUICK REFERENCE

LOGGING ON INTERNAL

Open Internet Explorer, then in the address bar type the cameras address, e.g.
http://192.168.1.125:6969, then type in your Username and Password. Each individual camera will have it's own address

LOGGING ON EXTERNALLY

Open Internet Explorer, then in the address bar type the cameras address e.g.
http://81.123.26.89:6969, then type in your Username and Password. The external address will be the same for every camera, all that will be different will be the last four digits(port number) depending on what camera you want to view.

VIEWING

Once logged click the SINGLE tab to view your camera.

MULTI VIEWING

To view all the cameras at once click the Multi tab. You will then be prompted to log in to each camera. Once logged in all cameras can be viewed. Multi Viewing can only be done from the main camera (normally camera 1)

MOVING THE CAMERA

To move the camera use the cursor arrows in the top left of the screen to move the camera. To return it to it's home position click the middle of the arrows.

ZOOMING IN/OUT

Move your mouse over the screen, Right Click, and then move your mouse back and forth to zoom in and out.

HOME POSITION

To change your permanent Home Position, click the Program button. Use the cursors to select your new Home Position, then click Save.

SNAPSHOT

To take a picture, click the picture icon at the top right of the screen. Then click the Disk icon at the top right of the picture to save it.

BUFFERED IMAGES (SD CARD REQUIRED)

To view images, which have been saved on the SD card, click the buffered images tab. Then select Motion Detection. To scroll through the frames click the numbers button then press play button when you find the frame you want to view. Frames are played in 10-second intervals. To save a clip, click download then save.

CHANGING TIME/DATE

Click Set-up, then Date and Time. Then set your new time and date. This will need to be done on each individual camera. WARNING: This will delete all saved images on the SD Card.

CHANGING PASSWORD

Click Set-up, select Administrator. Then type in your new username and password





PANASONIC I.P CAMERAS – RECORDING SOFTWARE

START RECORDING

Open up Network Camera Recording Software. Right Click and "Select All". All cameras will then be highlighted. Then select either the Record button or the Motion Record button. These are the two red buttons along the top of the screen. Recommended is the Motion Record button.

MULTI OR SINGLE VIEWING

For Multi or Single Viewing click the Window Icons at the top of the screen

VIEWING RECORDED IMAGES

Select Window then Recorded Images. Select the date, and then Search. Then select the camera (to view another camera, the previous camera must be de-selected). Select a time period, and then enlarge the playback area. Record images will then show in Yellow (motion detection) or Green (Normal Recording). Select Playback to view. Viewing can then be speeded up or slow down.

SAVING A RECORDED IMAGE

After viewing an image, highlight the image you want to save, select the file you want to save it to, then execute, and then save to disk or the computer.

CAMERA OPERATION

Select the Camera Operation icon along the top of the screen. Click your selected camera. Then move the cursors to operate your camera.

