

LKD HANDSET – USER GUIDE LDK SYSTEM QUICK REFERENCE

FLASH button is used to terminate an outside call and re-seize dial tone without having to hang-up the handset.

SPEED button provides you with access to speed dialling, save number redial and last number redial.

TRANS (TRANSFER) button is used to transfer an outside call from a station to another.

CALL BK (CALLBACK) button allows you to leave a callback indication at a station that is busy, unattended, or in Do Not Disturb.

CONF button is used to establish conference calls.

VOLUME bar allows you to adjust speakerphone and ringing volume.

DND/FWD (Do Not Disturb / FORWARD) button allows you to forward your calls to another destination, or make DND mode.

MUTE button allows you to switch the built in microphone on or off when using the speakerphone or the handset microphone when using the handset.

MON/SPEAKER button enables you to make a phone call without lifting handset. It turns the telephone on and off when using the speakerphone.

HOLD button enables you to place an outside caller on hold.

REDIAL Allows you to dial any of the last ten dialled numbers via the Volume Up/Down bar. Press HOLD/SAVE to dial the chosen number.

PLACING AN OUTSIDE CALL - Dial 9, with or without lifting the handset up or press an outside line button, then dial party desired. When called party answers, lift handset or use speakerphone if not already.

ANSWERING AN OUTSIDE CALL - Either lift handset or press SPEAKER button to use speakerphone, or press flashing line button whilst handset picked up.

CALL TRANSFER – Whilst connected to an outside call press TRANS/PGM button (the outside call is put on hold). Then dial the extension number or 'off-net' the call to another outside line (dial 9). (You can select a screened or unscreened transfer.)

Screened Transfer

This is when you announce the call prior to completing the transfer.

Unscreened Transfer

This is when you dial the desired extension and hang-up to complete the transfer without having to announce the call.

PAGING – To make a Page to all internal LKD Handsets, dial 549. Lift handset and you will hear a warning tone. After the tone speak your message, then Hang up.

CALL PARK – Whilst connected to an outside call press TRANS/PGM button. Dial the parking location (LDK 100 601–610. LDK 300 601-619). To retrieve a parked call lift the handset or press SPEAKER button then dial the relevant parking location.

GROUP PICK-UP - YOU SHOULD BE IN THE SAME PICK UP GROUP AS THE RINGING PHONE. You hear an unattended phone ringing. Lift the handset or press the SPEAKER button. Dial 566 and you will be connected to the calling party immediately.



CONFERENCE CALLING - Call the desired party (internal or outside). When the called party answers, press CONF button. Add the next conference party by selecting another outside line or extension number. When the party answers, press CONF button twice. All parties will now be connected. To terminate a conference, the conference initiator should be actively in the conference. Hang up, or press CONF button to finish the conference (only for conference initiator).

PLACING AN OUTSIDE CALL ON HOLD – Whilst connected to an outside line, press Hold/Save button (Once for system hold & twice for exclusive hold). To retrieve a Held call, press the line button illuminated green.

STORING/CHANGING A 'SYSTEM' SPEED DIAL NUMBER (RECEPTION HANDSET ONLY) Dial TRANS/PGM button, SPEED button and then the System Speed Number BIN (Numbered position range for LDK the number range is 2000-4999). Enter the desired telephone number and press HOLD/SAVE button. Now enter the name up to 16 letters using a specific code as per example* below:

* To store MH COMMS, dial 61 (*M is on button 6 in position 1*), 42, *1 (Space), 23, 63, 61, 61, 73.

STORING/CHANGING AN 'INDIVIDUAL' HANDSET SPEED DIAL NUMBER - Dial TRANS/PGM button, SPEED button and then the Speed Number BIN (Numbered position i.e. from 00 to 99). Enter the desired telephone number and press HOLD/SAVE. Now enter the Name up to 16 letters using a specific code as per example* below:

* To store MH COMMS, dial 61 (*M is on button 6 in position 1*), 42, *1 (Space), 23, 63, 61, 61, 73.

ERASING A SPEED DIAL NUMBER
Dial TRANS/PGM button, SPEED button and then the Speed Number BIN you would like to erase. Then press HOLD/SAVE button to delete. To release from this press SPEAKER button.

LISTING/DIALLING SPEED DIALS - If you know the BIN number, just press SPEED button, and then the BIN and the system will automatically dial it for you or **Press SPEED button twice, followed by 1, 2 or 3:** 'ICM: 1' – Lists all Internal Extensions; 'U_SPD: 2' – Lists all Personal Speed Dials & 'S_SPD: 3' – Lists all System Speed Dials. Scroll using the Volume controls or use the numbered button-pad as you would a mobile phone to find the starting letter. To dial, press the corresponding number (either 1 or 2) then HOLD/SAVE button.

PROGRAMMING A FLEX-BUTTON - Press TRANS/PGM button, the press the Flex Button you wish to program. Then dial either the extension number; the SPEED button followed by the BIN Number; or another system feature you may require. Press HOLD/SAVE button to complete.

HEADSET WORKING – To turn on TRANS/PGM 750 then HOLD
To turn off TRANS/PGM 751 then HOLD

CALL FORWARD ACTIVATE – Press MON/SPEAKER button, then DND/FWD button (or 554). Enter desired forward type (i.e. 1 = All Calls, 4 = Busy/No Answer calls). Enter desired extension number.

CALL FORWARD CANCEL Press MON/SPEAKER button, then DND/FWD button (or 554) followed by the # button.

